

CX SERIES

*Experience the incomparable
sound you expect from
Hammond.
And a whole lot more.*

 **HAMMOND®**



SPECIFICATIONS

Model		CX SERIES
Upper Keyboard		61 Keys
Lower Keyboard		61 Keys
Pedal Keyboard		25 Pedals
UPPER	Tonebar	9 Tonebars (16', 5-1/3', 8', 4', 2-2/3', 2', 1-3/5', 1-1/3', 1')
	Touch Percussion	2nd harmonic, 3rd harmonic, Soft, Fast
	Card Voice	Upper, Lower, Solo, Chorus, Volume 5 steps 7 integrated voices (Flute, Trumpet, Trombone, Saxophone, Harmonica, Marimba, Piano)
	Orchestral	Flute, Oboe, Pan Flute, Clarinet, Tenor Sax, Trombone, Accordion, French Horn, Synth Brass, Trumpet, Violin, Muted Trumpet, Harmonica, Pipe, Vocal, Harpsichord, Electronic Piano, Piano, Guitar, Glocken, Jazz Guitar, Clavi, Electric Guitar, Banjo, Steel Drum, Vibraphone, Chime, Timpani, Marimba, Volume 5 steps
	Strings	I, II, Chorus, Volume 5 steps
LOW.	Tonebar	9 Tonebars (16', 5-1/3', 8', 4', 2-2/3', 2', 1-3/5', 1-1/3', 1')
	Strings	Lower, Chorus, Volume 5 steps
PED.	Tonebar	2 Tonebars (16', 8')
	Pedal Voice	Wood Bass, Bass Guitar, Volume 5 steps
EFFECTS	Vibrato	Vibrato I, Vibrato II, Chorus
	Leslie	Leslie-Upper, Leslie-Lower, Leslie-Reverb, Leslie-Fast
	Sustain	Upper I, II, Lower I, II, Pedal I, II
	Digital Reverb	Digital Reverb-Slider
	Pro Chord	Open, Closed
MIDI		Upper, Lower, Pedal, Mute
Preset		1, 2, 3, 4, 5, 6, 7, 8, Cancel
CONTROL	Tonebar Cancel	Upper, Lower
	Coupler	Pedal-to-Lower, Lower-to-Pedal
	Transpose	6 steps upward, 6 steps downward
	Pro-foot	Leslie-Fast, Card Solo, Card Sustain, Fill In, Pro Chord, Tonebar Sustain, Orch Sustain, Break, Select
	Sequencer	Upper, Lower, Pedal, Rhythm and Control, Play, Record
RHYTHM	Easy Play	AutoBand 1, AutoBand 2, Auto Bass, Memory, Easy Play System
	Pattern (2000E, 2500 series)	March, Polka, Bluegrass, Country, Rock Ballad, Rock, 16 Beat 1, 16 Beat 2, Swing Ballad, Jazz, Rhumba, Bossa Nova, Latins, Samba, Tango, Waltz
	Variation	1, 2, 3, Off
	Control	Tempo Fast, Slow, Touch Start, Intro/Ending, Break, Fill-in, Auto Fill-in, Stop/Start, Volume Slider
Sequencer		Upper, Lower, Pedal, Rhythm/Control, Play, Record
DISPLAY	Display	LCD (Liquid Crystal Display with backup light, 40 digits, 2 lines) Menu, Play, Shift, 1, 2, 3, 4, 5, 6, 7, 8, Contrast
	Play Mode	Tonebar, Preset, MIDI Program Number, Tempo, Transpose, Card Voice, Vibrato Tremolo, Delay, LFO, VCF, Chorus
	Menu Mode	1. Voice Card : Load 2. Card : Load, Save (Set-Up, Sequencer) 3. Velocity : 1, 2, Off 4. MIDI : Upper, Lower, Pedal, Channel, Program Number, NRPC 5. Tonebar : Upper Bright/Mellow, Lower Bright/Mellow, Slow Attack, Leslie Channel 6. Strings : Touch-Off, Sustain, Fast, Slow, Chorus 7. Sequence : Song, Name, Edit (Repeat, Chain) 8. Rhythm : Auto-fill-in (2, 4, 8, 12, 16, 32), Foot Switch, Tempo Memory, MIDI Clock
OTHERS	Volume Control	Total Volume, EXT IN Volume, Mic Volume (with pull-off Reverb)
	Ext. Connection Terminal	MIDI IN, MIDI OUT, MIDI THRU, Leslie Out (11 Pins), Line In (FIX-EXP) Line Out (Left, Right, Rotary), Headphone, Mic In
	Slot	Memory Card Slot
	Foot Switch	Rhythm (Right), Pro-foot (Left)
	Power Output	Main Channel 50W, Sub Channel 50W, Leslie Channel 50W
	Speakers	38 cm x 1, 20 cm x 2 16 cm x 2, 10 cm x 2
	Organ Dimensions L x D x H	127 x 73 x 100 cm 50" x 28.7" x 39.4"
	Weight (Organ, Bench, Pedal)	114 kg, 17 kg, 25 kg 251 lbs, 37 lbs, 53 lbs
Appearance	Walnut or Ivory Finish	